



Note: ACC switch operates both seat heat system and accessory power jack
Seat heat system has two relays mounted on aileron trim bracket located under left side floorboards.

◊ Denotes CPC panel connector
>> Denotes quick connect

ACC KEYLOCK:
Place switch in "BAT" position when charging Main Battery through the accessory power jack.

DO NOT EXCEED 16 VOLTS
NOT FOR ENGINE CRANKING

Place switch in "BUS" position for normal accessory operation.

7.5 AMPS MAXIMUM CURRENT

RV-4/HR-II 4325-251

Electrical System

V. R. Little

(c) 2017

Vx Aviation

ELEC