



Note:
Compass power is provided by a 3.5 mm Jack on the instrument panel.

Note:
LAMP TEST switch is part of ALARM lamp assembly, used to test annunciator lamps and when adjusting panel dimmer level.

Note for IL-6A Inputs:
START-SW input signal is active high,
other input signals are active low.
START-SW alarm is shared with EFIS alarm

**IL-6A pinout is for prototype device only,
the production device pinout is different!**

RV-4/HR-II 4325-251		
Electrical System		
V. R. Little	(c) 2017 Vx Aviation	LIGHTS3