


Panasonic CB1-R-12V relay with internal resistor

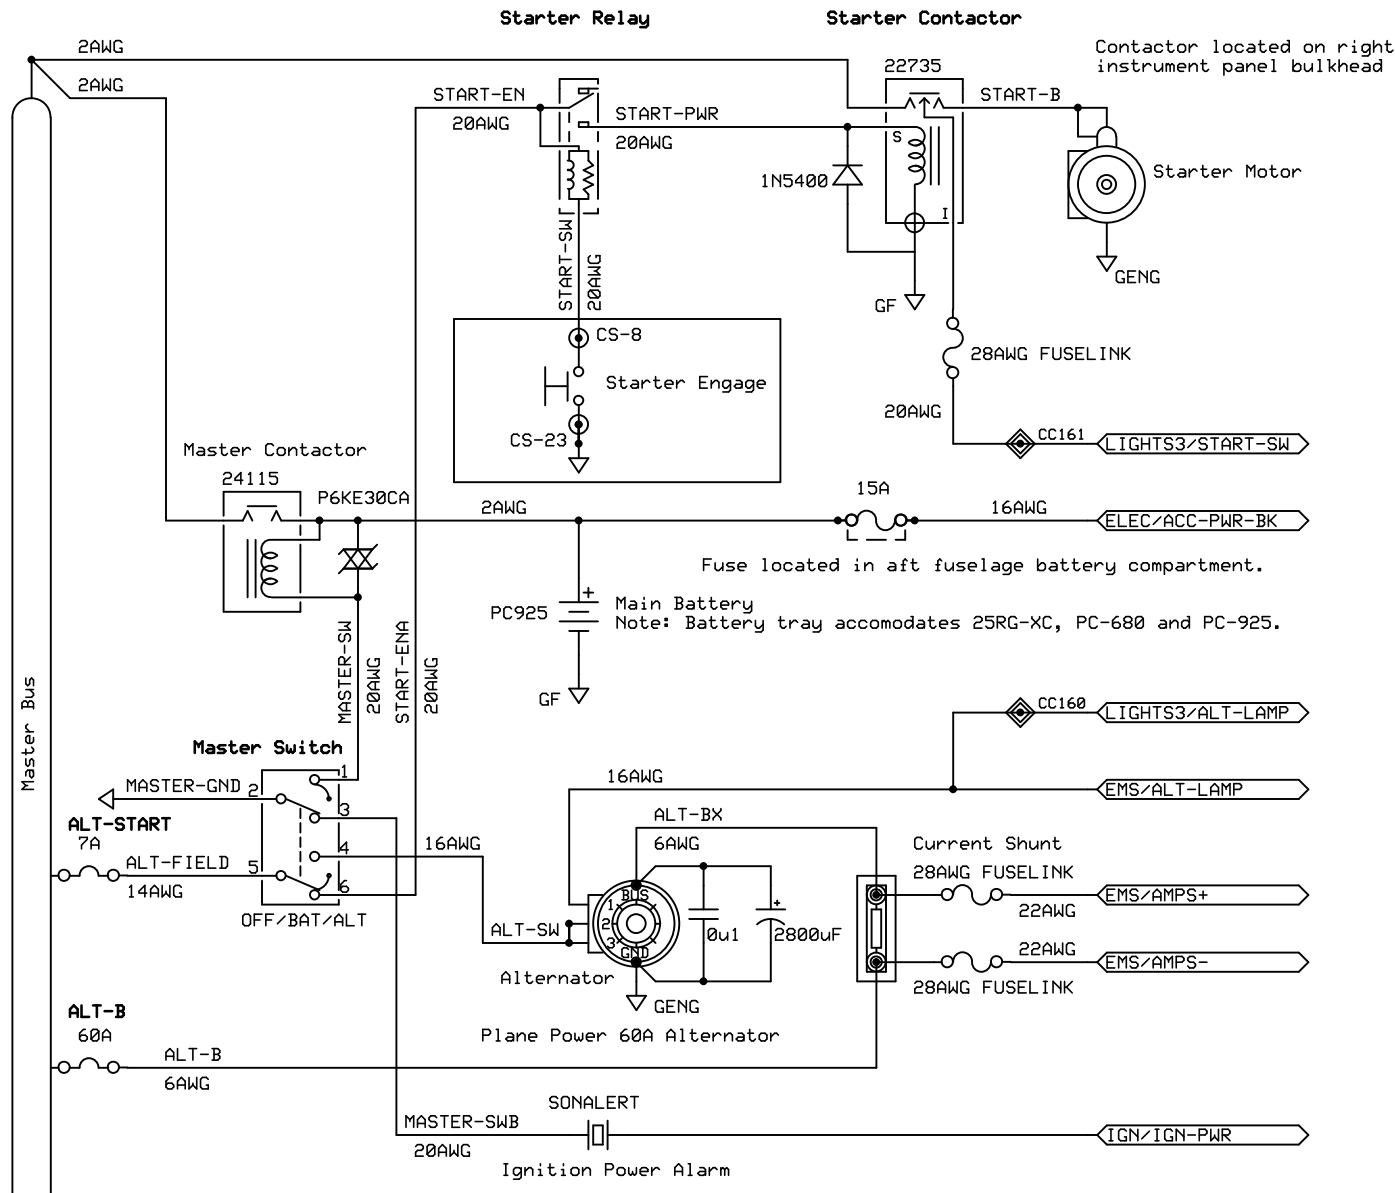

◊ Denotes CPC panel connector

○ Denotes pilot control stick connector

MASTER switch must on BAT in order to enable engine Starter

Sonalert will sound when Master Switch is OFF
 This provides an audible alarm of a live ignition
 and helps prevent inadvertent discharge of the ignition battery.

RV-4/HR-II 4325-251

Electrical System

V. R. Little	(c) 2015 Vx Aviation	MASTER
--------------	-------------------------	--------